

Installation Instructions

Choose a generator anchoring method that meets wind loading requirements in your area. Visit www.qwik.com/qwikpad4gen for the most up-to-date engineering documentation.

1 Inspect Hardware Package Contents:

Hardware needs are specific to generator model. The hardware shown at the left is included with the Universal Pad model (QT8202). See the model-specific hardware chart at the bottom of this section.

A - 2 WASHERS, FLAT 3/8" (Ø 1 1/4")	F - 4 BOLTS, HEX, 3/8-16 (2 1/2")
B - 4 WASHERS, FLAT 3/8" (Ø 7/8")	G - 2 BOLTS, HEX, 3/8-16 (2 1/4")
C - 4 WASHERS, LOCK 3/8"	H - 4 BOLTS, HEX, 3/8-16 (7/8")
D - 3 BOLTS, HEX, 3/8-16 (4 1/4")	I - 4 BOLTS, HEX, 3/8-16 (3 1/4")
E - 4 BOLTS, HEX, 3/8-16 (1 1/2")	

Refer to the following anchorage configurations to identify **general mounting points and appropriate hardware** for your specific generator model.
Refer to the **manufacturer's specifications for details** about the proper mounting points/methods for your specific generator model.

(SUPER UNIVERSAL CONFIGURATION)
QT8202 ANCHORAGE
TOP VIEW

30 X

FRONT

(BRIGGS & STRATTON – STEEL ENCLOSURE CONFIGURATION)
QT8210 ANCHORAGE
TOP VIEW

MECHANICAL UNIT FOOTPRINT

4 X

FRONT

(BRIGGS & STRATTON – POWER PROTECTION SERIES CONFIGURATION)
QT8215 ANCHORAGE
TOP VIEW

MECHANICAL UNIT FOOTPRINT

4 X

FRONT

(BRIGGS & STRATTON – ALUMINUM ENCLOSURE CONFIGURATION)
QT8220 ANCHORAGE
TOP VIEW

MECHANICAL UNIT FOOTPRINT

4 X

FRONT

(GENERAC/HONEYWELL CONFIGURATION)
QT8231 ANCHORAGE
TOP VIEW

MECHANICAL UNIT FOOTPRINT

8 X

FRONT

(KOHLER CONFIGURATION)
QT8240 ANCHORAGE
TOP VIEW

MECHANICAL UNIT FOOTPRINT

8 X

FRONT

ANCHOR DETAIL

TORQUE: 20-25 FT-LB

3/8"-16 S.S. BOLT

S.S. LOCK WASHER

S.S. WASHER

BOLT LENGTH (VARIES BY UNIT)

4 THREAD MIN. ENGAGEMENT


THREADED INSERT

GENERATOR PAD

MODEL SPECIFIC HARDWARE REQUIREMENTS

MODEL	DESCRIPTION	QTY	BOLT LENGTH	WASHER
QT8202	Generac/Honeywell, Kohler, Cummins, B&S, Pwr. Protectn. Series, Steel, & Aluminum	2-4	7/8", 1 1/2", 2 1/2", 2 3/4", 3 1/4", 4 1/2"	Cummins A and C All others B and C
QT8210	B&S, Steel	4	7/8"	B and C
QT8215	B&S, Pwr. Protectn. Series	4	3 1/4"	B and C
QT8220	B&S, Aluminum	4	3 1/4"	B and C
QT8231	Generac/Honeywell	4	4 1/2", 2 1/2"	B and C
QT8240	Kohler	4	1 1/2"	B and C


- 2 Locate the fill port cap (center of short side, nearest the product label). Ensure the cap is securely pressed into the pad, and then tip the pad on the edge where the plug is located. This process shifts the powdered gelling agent contained inside the pad toward the fill port.

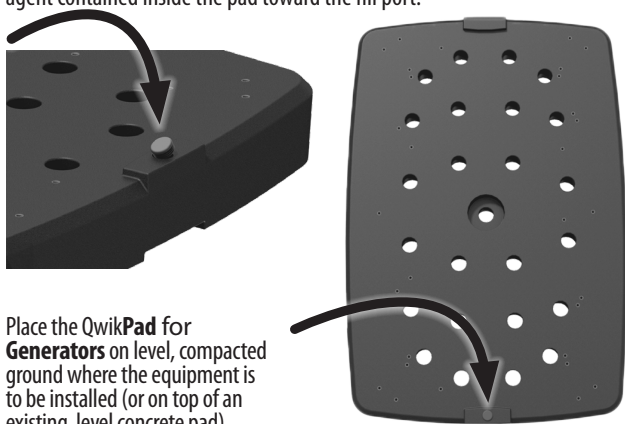


- 3 Place the QwikPad for Generators on level, compacted ground where the equipment is to be installed (or on top of an existing, level concrete pad).

- 4 Remove the fill port cap. Insert a garden hose into the fill port and fill QwikPad for Generators to the top with tap water.*
Do not overfill – Overfilling could result in losing a portion of the gelling agent. Replace the fill port cap.

*In areas that experience frequent freeze-thaw cycles, only fill the QwikPad for Generators 80% full for increased lifetime. This can be done by filling the pad with water to a depth of only 3 inches – when filling, use a dipstick or straw to periodically check the liquid height. Verify an 80% fill still meets local wind regulations by referring to our online calculator and information.

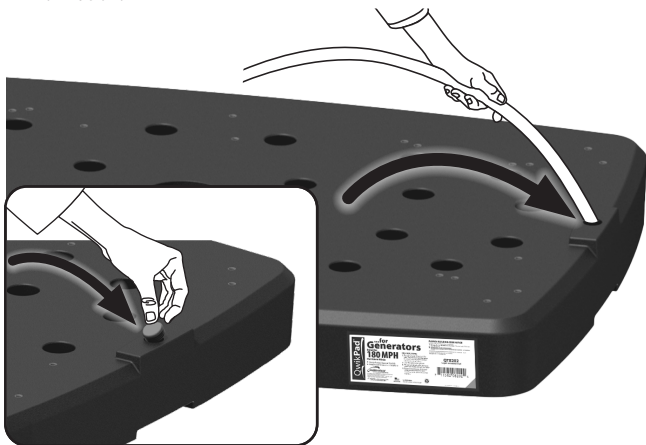

- 5 Additional Anchor (Required for some installations. QT8381 and QT8382 hardware sold separately)
Install concrete or ground anchor as required by wind load calculations.

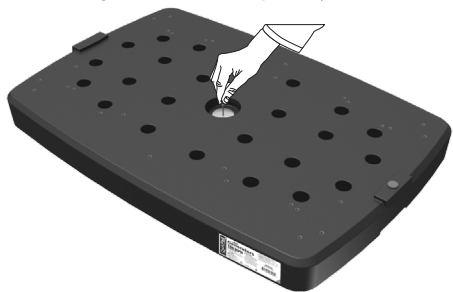


Concrete Anchor (QT8381) Installation:

- ▶ With the pad in place, drill a hole in the concrete using a 3/16" masonry bit aligned with the anchor hole centrally located on the QwikPad to 1.375" minimum depth.
- ▶ Secure the pad using the 1/4"x 5" concrete anchor with fender washer.

Ground Anchor (QT8382) Installation:

- ▶ With pad in place, install ground anchor in the anchor hole centrally located on the QwikPad.

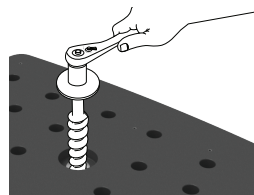

- 6 Place the equipment onto the QwikPad for Generators and center. Secure the generator to the pad using the included stainless steel mounting bolts with lock and flat washers. Torque to 20-25 FT-LB. Refer to the table at the bottom of Step 1 for the appropriate hardware.



NOTE: Mounting bolt placement is specific to the generator model.

For more details or information about the QwikPad for Generators, visit www.qwik.com/qwikpad4gen, email info@qwik.com or call 1-321-631-3550

